




Double Footswitch Looper Pedal

Owner's Manual

Features

- 44.1kHz 24bit high-quality looper and drum machine
- Up to 4 minutes of recording time per each track, 40 preset slots, and 160 minutes total recording capacity
- 100 different drum grooves from 10 unique music styles, 10 types of metronome settings to choose from
- EXT CTRL function supports external footswitch control (purchased separately)
- Supports import/export recording via USB with editor software
- The details of recording is displayed by the progress bar on the screen
- Separate footswitch for controlling looper and drum machine
- Recording saved automatically, even after CIRCLE LOOP is powered off

Layout

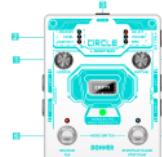

- LOOPER**
LOOPER control. Select the position, volume level, and fade out time of the LOOPER.
- LOOPER LED**
Indicates current LOOPER parameters
- Display Screen**
- RHYTHM LED**
Indicates current RHYTHM parameters
- RHYTHM**
RHYTHM control. Select the rhythm type, speed, and volume level of the RHYTHM setting.
- Left Footswitch**
- MERGER CTRL**
Toggle LOOPER and drum machine to work independently or simultaneously. Hold to delete recorded tracks.
- Right Footswitch**
Switch on/off

LOOPER

Press LOOPER knob to select a function below



MEMORY
LOOPER saving mode. In this mode, rotate LOOPER knob to select a slot to save loop file.

Current saving number → **MEM.1** Empty → EMPTY indicates empty slot

LEVEL
Playback volume level of the tracks. Ranges from -∞ to +6dB. If OUTPUT CLIPPING is displayed on the screen, please turn down the volume level of playback.



When the input signal level is detected to be clipping, "INPUT CLIPPING" will be displayed on the screen. Please turn down the input level or the output level of your instrument.



REC

Press LOOPER knob to select MEMORY. Rotate to an empty slot. Press left footswitch to start recording. The screen will display "REC" and timer will begin counting.



Playback

After current track recording is finished, press right footswitch to stop recording and begin playback. Progress bar will display play time.

Dub

After current track recording is finished, press left footswitch to enter Dub mode. It will start recording while playing back previously recorded tracks. Press left footswitch again to finish recording and begin playback of all recorded tracks.



UNDO

If two or more tracks have been recorded, press and hold right footswitch for 2 seconds during playback to delete the last track. "UNDO" will be displayed on the screen.

